 


### Instruction Manual

## Rechargeable work light

### 20W HIGH CRI COB LED

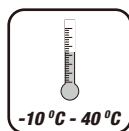

**CRI: 95**

**Color Control**

Art. 32030



 
 
Please read these instructions carefully to ensure the safe and effective use of this lamp.

Download Bedienungsanleitung / Téléchargement du mode d'emploi / Instructions download  
 Descarga de la instrucción de uso / Download de instruções de operação / Download del manuale




## PRODUCT DESCRIPTION

---

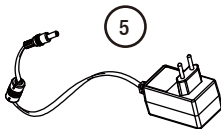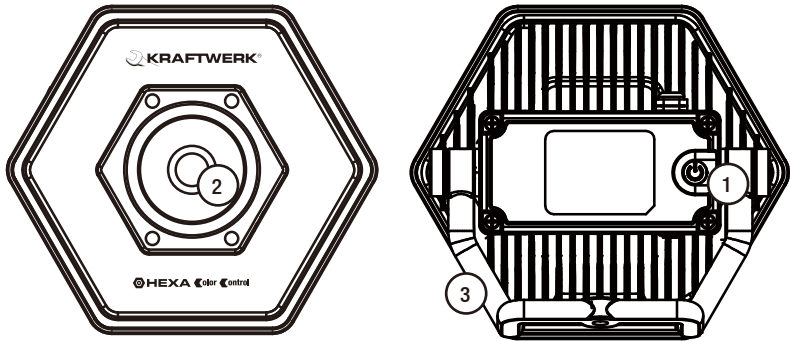

 1. ON/OFF switch
2. 20W HIGH CRI COB LED
3. U bracket
4. Charger socket
5. AC main charger 100-240 V~ 50/60 Hz (Art. 32029AL)

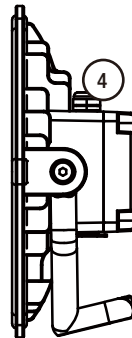

## SPECIFICATIONS

---

20W HIGH CRI COB LED light intensity: 400 Lumen (30% brightness) / 1400 Lumen (full brightness)

Light Source: 20W HIGH CRI COB LED

Working time: 8 h (30% brightness) / 2.5 h (full brightness)

Charging time: Approx. 3-4 h

Input power supply: 100-240 V~ 50/60 Hz

Transformer: 12.6 V 1.8 A

IP level: IP65

## USING INSTRUCTIONS

---

The ON/OFF switch is located on the back of the lamp:

- Press the ON/OFF switch once: half brightness
- Press the ON/OFF switch a second time: OFF
- Press the ON/OFF switch a third time: full brightness
- Press the ON/OFF switch a fourth time: OFF

## CHARGING PROCESS

---

To charge the lamp, remove the rubber cap from the hollow plug socket on the rear of the lamp and insert the round plug of the AC/DC power supply. Then connect the AC/DC power supply to a mains socket.

When indicator on charger is red the lamp is charging.

When indicator on charger is green the lamp is fully charged.

Fully recharge the lamp until indicator on charger turns green before first use.

The battery should only be charged with the charger supplied by the manufacturer. To avoid damage, please do not use any other chargers.

When not in use, the charger must be unplugged from the outlet.

Keep the lamp in a dry place away from direct sunlight. The lamp must be protected against high humidity and water.

## WARNING!

---

Avoid looking directly into the beam, as it will dazzle.

Don't use the lamp near open flames.

Do not disassemble.

Lamp gets hot after long use! Cool down the lamp before touch it.

If lamp will be stored for one month or more, please fully charge it prior to storage.

Don't leave battery flats, otherwise it could be over discharged and may NOT be able to be reused.

The battery cannot be replaced.

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.


The battery is to be disposed safety.




**NOTE:** Before disposing of damaged goods, check with your state Environmental Protection Agency to find out about special restrictions on the disposal of the lamp and batteries or return them to a certified service center for recycling.

**OPTIONAL:**


**ART. 32025-3**

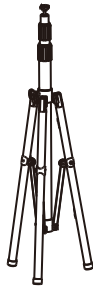


Max. 1648 mm  
Min. 684 mm

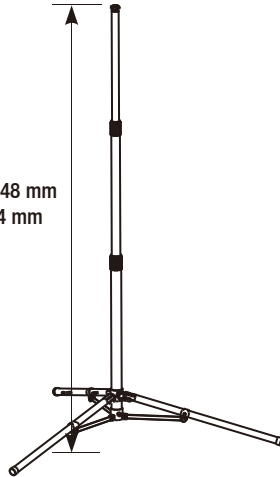

**ART. 32025-4**

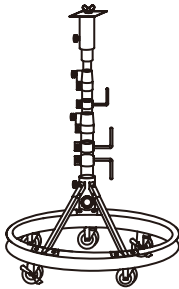 

Max. 1520 mm  
Min. 485 mm

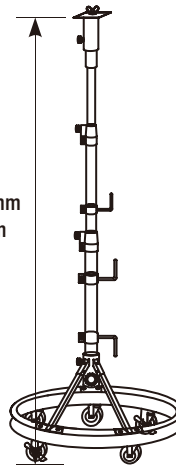 

Ø 550 mm

### **WARRANTY**

We do not take responsibility for any damage caused by misuse or any use that is not in compliance with the safety standards described herein.

### **CUSTOMER SERVICES**

Contact your local importer of your specialized dealer to obtain address of our service department. You find our partners under **[www.KRAFTWERKtools.com](http://www.KRAFTWERKtools.com)**



From date of purchase receipt

**2 YEARS GUARANTEE**

on material- or production-defects