KRAFTWERK

FAVORITE TOOLS SINCE 1979

Instruction Manual

Electric SMD-LED bonnet inspection lamp BONNET 1200



12 W 220-240 V 50/60 Hz

26 **SMD**


















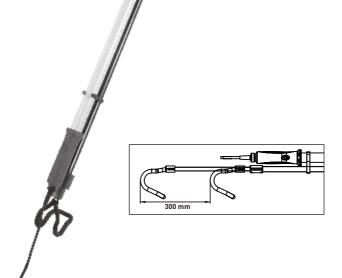









IMPORTANT! RETAIN FOR FUTURE REFERENCE: READ CAREFULLY!

SAFETY NOTES

- Prior to commissioning, make sure that the correct voltage is available.
- Prior to each use, ensure that the lamp and power cord are not damaged. A damaged light or mains supply cable pose a life-threatening risk of electric shock!
- Never use the lamp in potentially explosive-risk environments where flammable liquids, gases or dusts may be present. Danger of explosion!
- LED lights are extremely bright. Never look directly into the light beam.
- Do not open, repair or modify.
- If the external flexible cable or cord of this lamp is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- Make sure the light is attached firmly and securely. Make sure the cable is not crimped or otherwise damaged.
- Keep children away from the lamp. Children cannot estimate the high risk of electric shock.

TECHNICAL SPECIFICATIONS

Model	32073
Protection class	II
Protection degree	IP54
Impact protection	IK07
Nominal voltage	220-240 V~ 50/60 Hz
LED	12 W
Lumen	1200 lm
Lux	384 lx (1 m)
CRI	>70
Kelvin	6000 K
Operating temperature	-20°C ~ +40°C
Dimensions L/B/H	925 x 50 x 44 mm
Net weight	765 g

MAINTENANCE

NOTE: The light source contained in this lamp shall only be replaced by the manufacturer or his service agent or a similar qualified person. Never open the lamp when the mains supply cable is connected.



CAUTION, RISK OF ELECTRIC SHOCK (SOURCE: IEC60417-6042 (2011-11))!

CLEANING

Do not use solvents, corrosive cleaners or the like. Use a dry or slightly moist cloth for cleaning ONLY.



Waste electrical products should not be disposed of together with household waste. Please recycle where designated facilities exists. Check with your local authority or retailer for recycling advice.

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the main power supply when removing the battery.
- The battery must be disposed of safely.

WARRANTY

We do not take responsibility for any damage caused by misuse or any use that is not in compliance with the safety standards described herein.

CUSTOMER SERVICES

Contact your local importer of your specialized dealer to obtain address of our service department.

FROM DATE OF PURCHASE RECEIPT

2 YEAR GUARANTEE

ON MATERIAL OR PRODUCTION DEFECTS



FAVORITE TOOLS SINCE 1979

KRAFTWERK Europe AG Mettlenbachstrasse 23 CH-8617 Mönchaltorf Switzerland Tel. +41-44 949 40 50 KRAFTWERK Sàrl. 25, rue du Stade F – 67870 Bischoffsheim France Tel. +33-388 48 64 50

www.kraftwerktools.com