

# Instruction Manual Rolling work seat

Art. 3984





#### **SAFETY & GENERAL INFORMATION**

For your safety, read, understand, and follow the information provided with and on this Rolling work seat. The owner and operator shall have an understanding of this product and safe operating procedures before attempting to use. The owner and operator shall be aware that use of this product may require special skills and knowledge. Make certain that the operator thoroughly understands the inherent dangers associated with the use and misuse of the product. If any doubt exists as to the safe and proper use of this product, remove from service immediately.

**Inspect before each use.** Do not use if there are broken, bent, cracked or damaged parts (including labels). Any seat that appears damaged in any way, or operates abnormally shall be removed from service immediately. If the seat has been subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until it has been inspected by KRAFTWERK authorized service center. It is recommended that an annual inspection be done by qualified personnel. Labels and Operator's Manuals are available from manufacturer.

#### **PRODUCT DESCRIPTION**

Easy rolling Ø75mm swivel composite castors.


\* Rated Capacity: One (1) person weighing 135 kg. or less- includes person, tools, equipment, personal items.

#### SPECIFICATIONS

Model	Capacity	Wheels	Size
3984	*135 kg	5	450 x 450 x 450 mm



Do not use this device for any purpose other than that for which it is expressly intended.

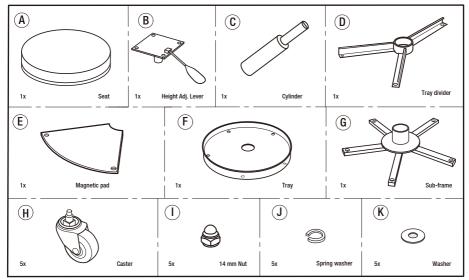


## PARTS LIST:

# PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Dimensions: 450 x 450 x 450 mm

## **ASSEMBLY DIAGRAM & ASSEMBLY INSTRUCTIONS**

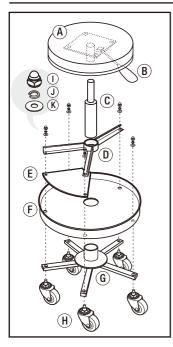

#### **TOOLS REQUIRED FOR ASSEMBLY**

Adjustable Wrench or 14mm open end or socket

#### ASSEMBLY INSTRUCTIONS

- Unpack all parts before discarding/recycling the packaging material.
- Assemble the casters (H) to the tray (F), sub-frame (G), and tray divider (D) as shown, and tighten.
- Place the pneumatic cylinder (C) into the base as shown.
- Place the seat top (A) onto the pneumatic cylinder ram as shown.

**NOTE:** The pneumatic cylinder is taper fit to the base and seat top and requires no hardware. Please check that the connecting surfaces are clean and dry before assmbly. Firmly press down on seat. Lift the seat by the top cushion to ensure positive connection.

#### USAGE

**RAISING THE SEAT**: Once the seat top is securely attached to the pneumatic ram, lift the height adjustment lever (B) wihtout putting any weight on the seat. This will raise the seat to its maximum height.

LOWERING THE SEAT: Pull up on the adjustment lever while sitting on the seat to lower it to its lowest height. The seat can be adjusted to any height by releasing the adjustment lever at the desired height.



# WARNING

- This seat may tip over if any caster wheel(s) are caught in a crack, seam, on a rock, pebble
  or other obstacle, or when used on soft carpeted floors.
- · Be cautious when moving the seat while seated on it.

# **CARE AND MAINTENANCE**

#### MAINTENANCE

Little maintenance is required of this device. Wipe clean as needed. Use mild upholstery cleaner (not caustic) to clean seat as needed.



Never add lubricant to casters!

#### WARRANTY

We do not take responsibility for any damage caused by misuse or any use that is not in compliance with the safety standards described herein.

#### **CUSTOMER SERVICES**

Contact your local importer of your specialized dealer to obtain address of our service department.

FROM DATE OF PURCHASE RECEIPT 2 YEAR GUARANTEE ON MATERIAL OR PRODUCTION DEFECTS



KRAFTWERK Europe AG Mettlenbachstrasse 23 CH-8617 Mönchaltorf Switzerland Tel. +41-44 949 40 50 KRAFTWERK Sàrl. 25, rue du Stade F – 67870 Bischoffsheim France Tel. +33-388 48 64 50

www.kraftwerktools.com