







# KRAFTWERK®

FAVORITE TOOLS SINCE 1979

## Instruction Manual

### LED hand lamp IN.SPOT 130, rechargeable

Art. 32070

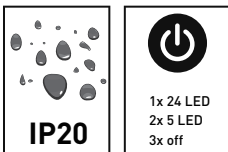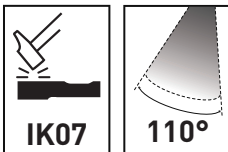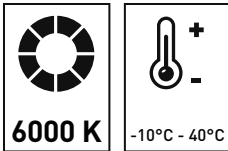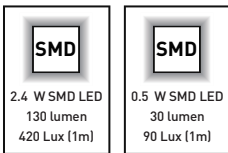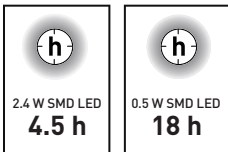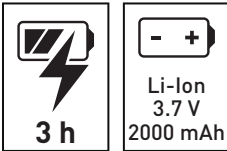

**IMPORTANT! RETAIN FOR FUTURE REFERENCE: READ CAREFULLY!**

## **TECHNICAL SPECIFICATIONS**

Model	32070
Protection class	III
Protection degree	IP20
Impact protection	IK07
Nominal voltage	100-240 V~ 50/60 Hz
Output voltage	5 V $\overline{\text{---}}$ 1 A (Max.)
LED	2.4 W SMD, 0.5 W SMD
Lumen	130 lm (2.4 W) , 30 lm (0.5 W)
Lux	420 lx (2.4 W / 1 m), 90 lx (0.5 W / 1 m)
CRI	>80
Kelvin	6000 K
Charging time	3 h
Operating time	4.5 h (2.4 W), 18 h (0.5 W)
Battery	Li-ion 3.7 V $\overline{\text{---}}$ 2000 mAh
Operating temperature	-10°C ~ +40°C
Dimensions L/B/H	290 x 66 x 49 mm
Net weight	332 g

## **PROPER INTENDED USE:**

The handlamp is suitable for indoor and outdoor lighting applications.

## **WARNING / CHARGING INSTRUCTION / BATTERY TIPS**

- Avoid looking directly into the beam of light, as this will result in dazzling.
- Do not use the lamp near a naked flame.
- Before using the lamp for the first time, the battery must be fully charged.
- Recharge frequently.
- Always replace the battery with an original battery.
- Do not leave the battery without charge for an extended period.
- Deep discharge risks damaging the battery.
- The light source of this lamp is not replaceable; when the light source reaches its end of life the whole lamp shall be replaced.

## **CLEANING**

Do not use solvents, corrosive cleaners or the like. Use a dry or slightly moist cloth for cleaning **ONLY**.



Waste electrical products should not be disposed of together with household waste. Please recycle where designated facilities exist. Check with your local authority or retailer for recycling advice.

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the main power supply when removing the battery.
- The battery must be disposed of safely.

## **WARRANTY**

We do not take responsibility for any damage caused by misuse or any use that is not in compliance with the safety standards described herein.

## **CUSTOMER SERVICES**

Contact your local importer or your specialized dealer to obtain address of our service department.

---

**FROM DATE OF PURCHASE RECEIPT  
2 YEAR GUARANTEE  
ON MATERIAL OR PRODUCTION DEFECTS**

# **KRAFTWERK®**

FAVORITE TOOLS SINCE 1979

**KRAFTWERK Europe AG**  
Mettlenbachstrasse 23  
CH-8617 Mönchaltorf  
Switzerland  
Tel. +41-44 949 40 50

**KRAFTWERK Sàrl.**  
25, rue du Stade  
F - 67870 Bischoffsheim  
France  
Tel. +33-388 48 64 50

**[www.kraftwerktools.com](http://www.kraftwerktools.com)**